



MX-0804-EDC


8×4 Seamless Matrix Switch for Presentation Systems with USB-C, HDMI, Audio DSP, and Dante

User Manual


Version: V1.0.0



Important Safety Instructions

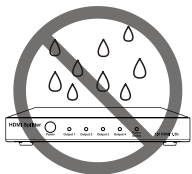


1. Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

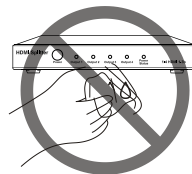


6. Clean this apparatus only with dry cloth.




2. Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

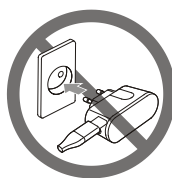

7. Unplug this apparatus during lightning storms or when unused for long periods of time.

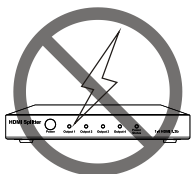

3. To prevent risk of electric shock or fire hazard due to overheating, do not obstruct the unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.

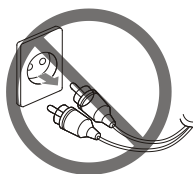

8. Protect the power cord from being walked on or pinched particularly at plugs.



4. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



9. Only use attachments / accessories specified by the manufacturer.



5. Do not place sources of naked flames, such as lighted candles, on the unit.



10. Refer all servicing to qualified service personnel.

Table of Contents

Introduction	3
Overview	3
Features	3
Package Contents	3
Specifications	4
Panel Description	5
Front Panel	5
Rear Panel	6
Installation and Wiring	6
Installation	6
Wiring	7
Application 1: Single HDMI Output	7
Application 2: Dual HDMI Output	7
Key Functions	8
Screen Mirroring	8
(1) Screen Mirroring over Airplay (for Apple Devices)	8
(2) Screen Mirroring over Miracast (for Android Phones & Windows PCs)	8
(3) Screen Mirroring over Dongle	8
Multiview Display	9
Automatic Signal Switching	9
Display Mechanism of HDMI OUT1 & HDMI OUT2	9
Dual Desktop Mode for HDMI Inputs	9
Guide Screen	10
OSD	10
Network Mode Configuration	11
Using SELECT Button to Perform EDID Copy	11
Web UI	12
General Tab	12
Splash Screen	12
USB Switcher	13
Network Settings	13
Network Security	14
Web Password	15
Firmware	15
Version Information	16
Video Settings Tab	16
Input Switching	16
Output Setting	16
EDID Settings	17
Auto Switching	18
Wireless	18
Device Name	18
Wireless Screen Sharing	18
Access Point	19
Display Control	20
CEC	20
RS-232	21
Control Strategy	22
Power On/Off Device	22
Firmware Upgrade	22

Introduction

Overview

This product is a fixed 1RU 8x4 fast switching matrix with both USB-C and HDMI inputs. It builds in 4K60 scaler on all video outputs, and features seamless transition when switching video inputs. The USB-C input is fully featured, which supports 4K60, USB 3.1 gen1, 1G network and PD 3.0 USB host charging up to 60watts.

The matrix also features rich audio connections, which include analog microphone inputs, Dante 4x4 digital inputs and outputs, USB audio and line audio outputs. It features audio mixing and ducking on each line output.

The matrix is also integration friendly with flexible control options, including front panel buttons, RS-232 and LAN control (Telnet & Web UI), and supports Wyrestorm Sigma cloud connection and control for reboot, firmware upgrade and other features.

The matrix is designed for professional markets, such as high education classroom, corporate meeting rooms etc.

Features

- Inputs and outputs support resolutions up to 4K@60Hz 4:4:4 8bit
- Supports HDCP 2.3 and backward compatible
- HDMI outputs support free scaler from 480p to 2160p, and provides seamless transition without seeing black screen switching
- Full-featured USB-C input port, supports 4K@60Hz, USB 3.1 gen1, 1G network, and PD 3.0 charging up to 60 watts
- Supports USB host switching and USB device extension
 - Switching USB hosts include 1x USB3.0 type-C port and 2x local USB3.0 type-B ports;
 - USB devices include 4x local USB3.0 type-A ports.
- Versatile audio connection and DSP:
 - 2x Mic inputs, and 1x LINE input;
 - 1x USB audio input and 1x USB audio output, with 48KHz sampling frequency;
 - Dante 4x4 with various sampling rates;
 - HDMI audio de-embedding with sampling frequency up to 192KHz;
 - Supports 2x Balanced audio outputs, and each has an independent mixer, and supports ducking
- Multiple control options, including front panel buttons, RS-232 and LAN (Web UI & Telnet)
- Sigma Cloud built-in

Package Contents

- 1 x Matrix
- 1 x AC Power Cord with US Pins
- 1 x AC Power Cord with EU Pins
- 1 x AC Power Cord with AU Pins
- 1 x AC Power Cord with UK Pins
- 1 x USB-C Cable (L = 2m)
- 3 x Phoenix Male Connector (3.5mm, 3 Pins)
- 4 x Phoenix Male Connector (3.5mm, 5 Pins)
- 1 x Phoenix Male Connector (3.5mm, 6 Pins)
- 2 x Mounting Brackets (1U, with Screws)
- 1 x QuickStart Guide

Specifications


Technical	
Input / Output Ports	1x USB-C IN, 7x HDMI IN, 4x HDMI OUT, 2x MIC IN, 1x LINE IN, 2x LINE OUT, 2x USB HOST, 4x USB DEVICE, 2x ETHERNET, 1x RS-232, 2x RELAY, 1x GPIO, 1x Dante (RJ45 port), 1x AC 100~240V 50/60Hz, 1x RESET
Input/Output Video Type	4K@60Hz 4:4:4 8bit, HDCP 2.3
Input Resolutions Supported	VESA: 800x600 ⁸ , 1024x768 ⁸ , 1280x768 ⁸ , 1280x800 ⁸ , 1280x960 ⁸ , 1280x1024 ⁸ , 1360x768 ⁸ , 1366x768 ⁸ , 1440x900 ⁸ , 1600x900 ⁸ , 1600x1200 ⁸ , 1680x1050 ⁸ , 1920x1200 ⁸ SMPTE: 720x576P ⁶ , 1280x720P ^{6,7,8} , 1920x1080P ^{2,5,6,7,8} , 3840x2160 ^{2,3,5,6,8} , 4096x2160 ^{2,3,5,6,8} 2 = at 24 Hz, 3 = at 25 Hz, 5 = at 30 Hz, 6 = at 50 Hz, 7 = at 59.94 Hz, 8 = 60 Hz
Output Resolutions Supported	3840x2160 ⁸ , 3840x2160 ⁶ , 3840x2160 ⁵ , 3840x2160 ³ , 3840x2160 ² , 1920x1200 ⁸ , 1920x1080 ⁸ , 1920x1080 ⁶ , 1680x1050 ⁸ , 1600x1200 ⁸ , 1600x900 ⁸ , 1440x900 ⁸ , 1366x768 ⁸ , 1360x768 ⁸ , 1280x1024 ⁸ , 1280x960 ⁸ , 1280x800 ⁸ , 1280x768 ⁸ , 1280x720 ⁸ , 1280x720 ⁶ , 1024x768 ⁸ , 800x600 ⁸ 2 = at 24 Hz, 3 = at 25 Hz, 5 = at 30 Hz, 6 = at 50 Hz, 7 = at 59.94 Hz, 8 = 60 Hz
Audio Format	USB-C/HDMI/MIC IN/LINE IN/LINE OUT: PCM 2.0
Maximum Data Rate	HDMI: 18Gbps USB-C: 5Gbps (per lane)
Control Method	Front panel buttons, RS-232, LAN (Telnet API & Web UI)

General	
Operating Temperature/RH	2x HDMI, 2x USB-C, 3x LAN, 2x Wi-Fi
Storage Temperature/RH	RAW PCM 2.0, 16 bit, 32/44.1/48KHz sps
Humidity	2x HDMI, 1x Analog Audio Out
ESD Protection	Human-body model: ±8Kv (air-gap discharge)/ ±4kV (Contact discharge)
Power Supply	AC 100~240V 50/60Hz
Power Consumption	124W (Max)
Dimensions (W x H x D)	440mm x 43.5mm x 330mm/17.2" x 1.71" x 12.99" (Mounting brackets not included)
Weight	3.8kg/8.38lbs
Rack Space Required	1 RU

Transmission Distance	
Standard	IEEE 802.11 a/b/g/n/ac
Frequency	Dual bands, 2.4~2.4835GHz, 5.0~5.8GH
Throughout	2 x Wi-Fi, 2T x 2R, up to 867Mbps
Security	WEP, TKIP, AES, WPA, WPA2


Panel Description

Front Panel

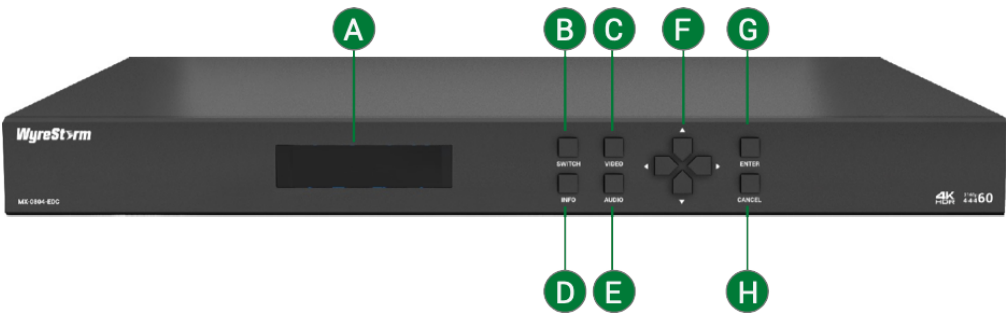

	Name	Description
A	LCD Indicator	Display the information of the button operation.
B	SWITCH Button	Press the button to enter input channel switch mode.
C	VIDEO Button	Press the button, the LCD indicator window will display the video information of selected input port, including resolution, color space, and HDCP.
D	INFO Button	Press the button, the LCD indicator window will display the device's information, including IP address, Fan speed, MAC address, firmware version and temperature.
E	AUDIO Button	Press the button, enter the volume adjustment mode
F	Selection Buttons	INFO: Press the four selection buttons to flip the page to display the information. AUDIO: Press the left/right button to switch audio output ports. Press the up/down button to increase volume / decrease volume. SWITCH: Press the left/right button to switch output. Press the up/down button to select input for the selected output. VIDEO: Press the left/right button to switch input port. Press the up/down button to flip the page to display the video information.
G	ENTER Button	Press the button to perform the switching operation.
H	CANCEL Button	Press the button to cancel the operation or exit the current mode.

Rear Panel

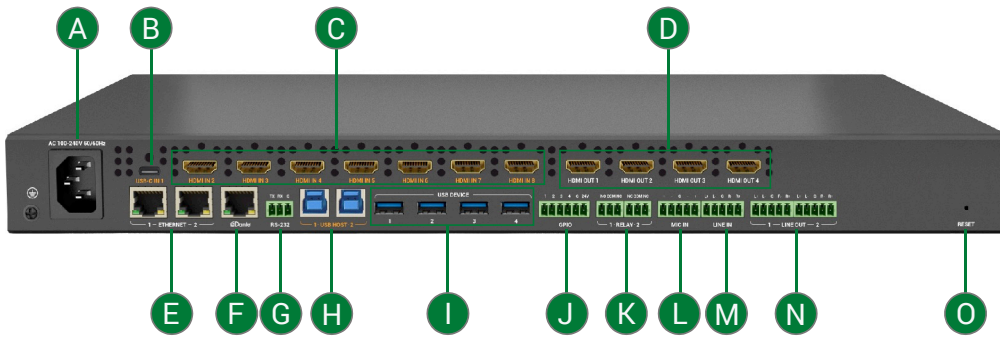

	Name	Description
A	AC 100~240V 50/60Hz	Connect to the power source via the provided AC power cable
B	USB-C IN 1	<p>USB 3.0 Type-C port; connect to a laptop with USB type-C port. It supports three functions:</p> <ul style="list-style-type: none"> The port supports audio, video and USB 3.0/2.0 signals transmission, maximum 5Gbps data rate; The port supports PD 3.0, and can supply up to 60W power for the connected device; The port supports 1G network connection, the laptop connected with the port can access the ethernet the matrix connected. <p>The following cable are recommended to use: USB Type-C to Type-C cable (USB 3.0 or above)</p>
C	HDMI IN 2-8	Connect to HDMI sources.
D	HDMI OUT 1-4	Connect to HDMI displays.
E	ETHERNET 1-2	Connect to the network, for web UI control, or telnet control.
F	Dante	RJ 45 port. Connect to the network for Dante audio connection.
G	RS-232	Connect to a RS-232 enabled control device for API control or RS-232 routing.
H	USB Host 1-2	USB 3.0 Type-B port. Connect to USB host devices.
I	USB DEVICE 1-4	USB 3.0 Type-A port. Connect to USB devices.
J	GPIO	Connect to GPIO devices. Support connecting up to four GPIO devices.
K	RELAY 1-2	Connect to relay devices for relay control.
L	MIC IN 1-2	Connect to microphones.
M	LINE IN	Connect to line out device.
N	LINE OUT 1-2	Connect to audio receivers.
O	RESET	<p>Use a needle to press and hold the recessed reset button:</p> <ul style="list-style-type: none"> Less than 5s: Nothing will happen. More than 5s but less than 15s: Reset the IP mode of the device to DHCP, and reset the login passwords of telnet and web UI to defaults. The default login password of telnet is "wyrestorm", and the default login password of web UI is "admin". More than 15s: Reset the device to factory defaults.

Installation and Wiring


Installation

Note: Before installation, please ensure the device is disconnected from the power source.

The matrix occupies 1U space and can be placed on a solid and stable surface or installed on a standard equipment rack.

To install the matrix on an equipment rack

1. Position and install the mounting brackets provided to the panels on both sides.

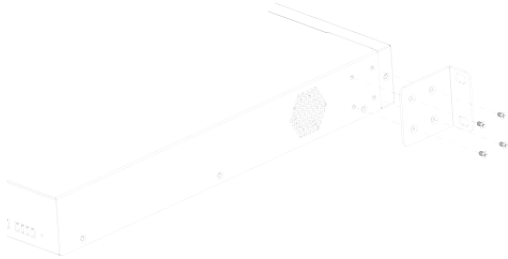


2. Affix the matrix to the mounting rack using the mounting screws.


Wiring Diagram

Note: To prevent remote users from hearing feedback audio, during configuration, it is advisable to avoid selecting the USB IN as the input for the USB OUT audio channel.


Wiring 1 (Local Presentation)

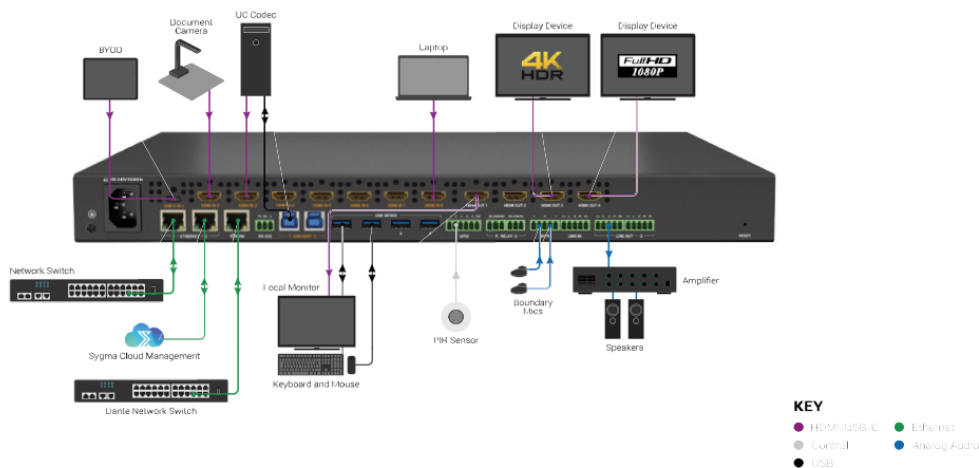

Wiring 2 (Large Lecture Hall)

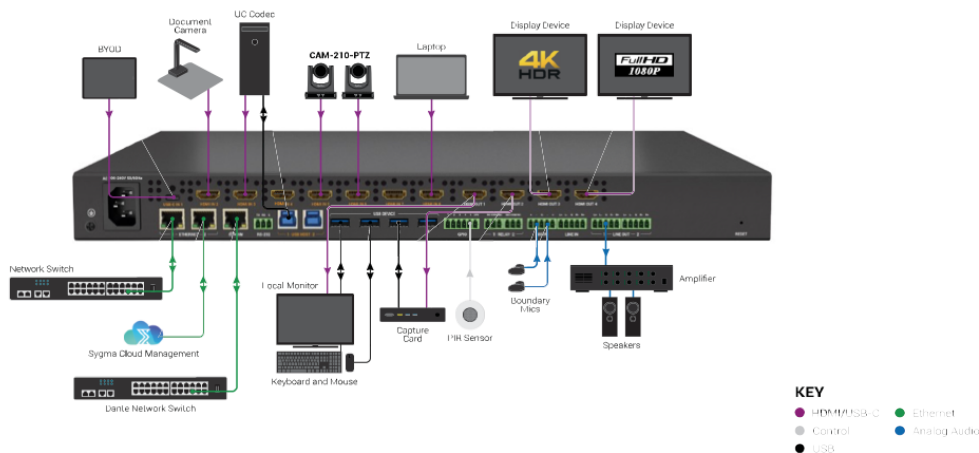

Wiring 3 (Corporate Unified Communications)

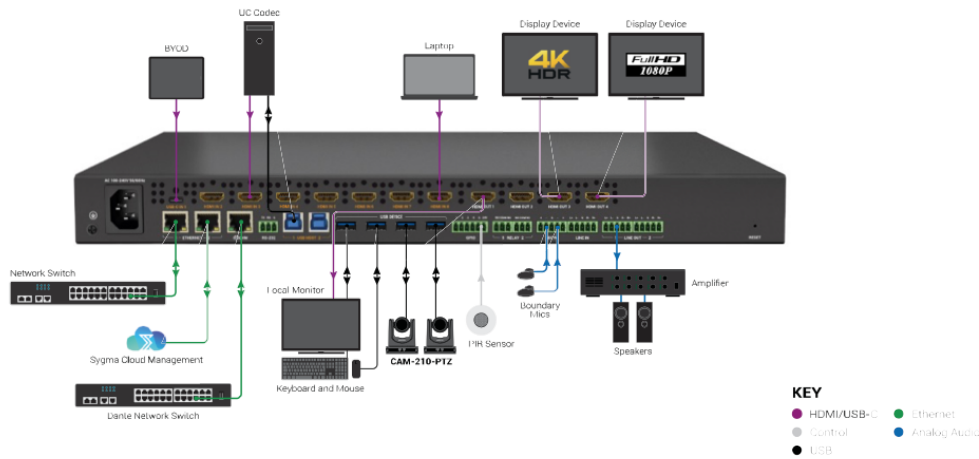

Instruction of Dante

The matrix supports 4x4 Dante audio transmission. Before using Dante function, please enable all devices are connected to the same network, as the Dante Controller is only available on wired connections.

Connect the "Dante" port to a local area network, and launch the "Dante Controller" software on the laptop connected in the same network (Refer to <https://www.audinate.com/products/software/dante-controller> to download the latest Dante Controller). Pair the transmitters and receivers (both the transmitters and receivers are connected with the same network) as required on the Dante Controller with the matrix. the paired transmitters can generate Dante audio and transmit it to the Dante in of the matrix through the network, and the paired receiver can receive Dante audio from Dante out of the matrix through the network. Users can set audio sources and audio outputs through API commands or web UI. Refer to the separate document "API Command Set_MX-0804-EDC" or "[Web UI Control](#)" section for more information.

RELAY Pinout Introduction

The matrix equips two relay ports.

- NO: Normally open
- NC: Normally closed
- COM: Common connector



Note: Relay port configuration, please refer to "[Web UI Control](#)" section.

Control of the Matrix

The matrix can be controlled through Front Panel, RS-232, LAN (Web UI or Telnet).

Front Panel Control

Basic switch of input sources to output displays, audio volume adjustment, and information obtain can be achieved by using front panel controls.

1. Power on the matrix, the LCD indicator window will display "Starting", and wait until the window display the matrix's model and IP address, which indicates the matrix is ready to operate.
 - 1) Press "SWITCH" button to enter switch mode.
 - 2) Press the Left () or Right () button to select output channel. The ">" icon will move to the output port number that is being select currently.
 - 3) Press the Up () or Down () button to select input channel.
 - 4) Press "ENTER" button to confirm the selection or press "CANEL" to exit the mode and return to the main page.
2. Adjust volume of audio outputs
 - 1) Press "AUDIO" to enter volume adjustment mode.
 - 2) Press the Left () or Right () button to select audio output channel.
 - 3) Press the Up () or Down () button to adjust volume of the selected channel.
 - 4) Press "CANCEL" to exit the mode and return the main page.
3. Get device's information or video information
 - 1) Press "INFO" button to enter device's information display mode or press "VIDEO" button to enter video information display mode.

- 2) Press the Left () or Right () button to flip the page to display the video information in video information display mode or flip to display the device's information in device's information display mode.
- 3) Press the Up () or Down () button to select input port to get its video information in video information display mode, or flip the page to display the device's information in device's information display mode.
- 4) Press "CANCEL" to exit the mode and return the main page.

Command Control

Advanced users may need to control the device via API commands. API commands can be obtained from the separate document "API Command Set_MX-0804-EDC".

Two methods are provided for controlling this device through API commands:

RS-232

Connect a control PC to the RS-232 port of the device. Before sending API commands to control the device, ensure the serial ports between this device and PC are configured correctly. A professional RS-232 serial interface software (e.g., Serial Assist) may be needed as well.

Parameter	Value
Baud rate	9600bps
Data Bits	8bits
Parity	None
Stop Bits	1
Flow Control	None

Telnet

Connect a control PC to the LAN port of the device. Before you intend to control the device through telnet API, you shall establish connection between this device and your computer.

The form of the command for telnet connection is below:

telnet ip (port)

- ip: The device's IP address.
- port: The device's port number, this is non-required for some Telnet control tools. Default setting is 23.

For example, if the device's IP address is 192.168.11.143, the command for telnet connection shall be the following:

telnet 192.168.11.143

Web UI Control

The Web UI designed for the matrix allows basic controls and advanced settings of the matrix and can be accessed through a browser with latest version, e.g., Chrome, Safari, Firefox, Opera, IE10+, etc.

The default IP mode of the matrix is DHCP. Default login password for Web UI is "admin". If the device is not connected to DHCP server, it will generate a local 169.254.xxx.xxx IP address.

To get access to Web UI

1. Connect the any of the two ETHERNET ports of the matrix to the ethernet switch with DHCP server, and connect the PC to the same ethernet switch. If connect one ETHERNET port to the PC directly, please set the PC to the same segment with the device.
2. Get the IP address through the LED indicator window on front panel, using the "SmartSetGUI" tool on PC or sending command "GET IPADDR<CR><LF>".
3. Input the IP address obtained in the last step in your browser and press "Enter" key on keyboard. The following page can be access in:



- To implement basic video and audio control of the matrix, click "User" to login as User. When login as User, no password is required. In this mode, only the submenus in Matrix Control tab can be set.

Matrix Control

General Setting

Advanced Setting

User Mode

Admin Login

Video Routing

Audio Routing

USB Routing

Display Control

Presets Matrix Control

- If advanced setting is required, click "Admin", and enter the password to login as Admin.



Matrix Control Login

User

Admin

Admin Password:

Admin Login

The default password is "admin". When log on to the web UI for the first time, after clicking "Admin Login", you will enter the following window to change login password. Input new password and click "Apply" to enter the main page.

Change Password

Please change your password to continue

New Password

Confirm New Password

Apply

Note: Password must be 4 to 16 characters in length, alphanumeric only.

Note: The new password must be 4 to 16 characters in length, alphanumeric only

Matrix Control

General Setting

Advanced Setting

User Mode

Admin Login

Video Routing

Audio Routing

USB Routing

Display Control

Presets Matrix Control

- In User mode, users can also click "Admin Login" on the upper right corner, then input the password enter Matrix Control, General Setting and Advanced Setting pages. The default password is "admin". When login web UI first time, users also need to change login password firstly. The operations are same with logging through the home page.

Admin Login

Password:

Login

The main page includes three tabs: Matrix Control, General Setting and Advanced Setting.

Web UI Introduction

Matrix Control

Video Routing

Video Routing					
Source/Zone	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	All
INPUT 1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
INPUT 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
INPUT 3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
INPUT 4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
INPUT 5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
INPUT 6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
INPUT 7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
INPUT 8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
None	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

This section manages distribution of input video sources to output displays and shows the connection status of the inputs and outputs.

The green names of inputs and outputs indicate that the corresponding input and output ports are connected to active sources and active displays. The grey names of inputs and outputs indicate that the corresponding input and output ports aren't connected with active sources and active displays.

Click the button in the table to select the input for the output display (button turns from white to blue once selection is done).

- All: Click to route one input to all outputs.
- None: None input is routed to the output (or the output is turned off).

By default, Video Input 1 routes to Output 1...Video Input 3 routes to Output 3, Video Input 4 routes to Output 4.

Audio Routing



This section allows users to set audio routing and configure audio DSP.

Note: To prevent remote users from hearing feedback audio, during configuration, it is advisable to avoid selecting the USB IN as the input for the USB OUT audio channel.


Click the box at the intersection of an audio input and output to select this audio input as the source for this audio output. One audio output can select multiple audio inputs and one audio input can be selected for multiple outputs.

Clicking an IN or OUT button, highlights the routing path, and the IN/OUT button will have a light orange frame.

Click the blue box labeled with the audio DSP name to enter the setup page (the selected button will have a light orange frame, and the corresponding routing path is highlighted) for that specific audio DSP.

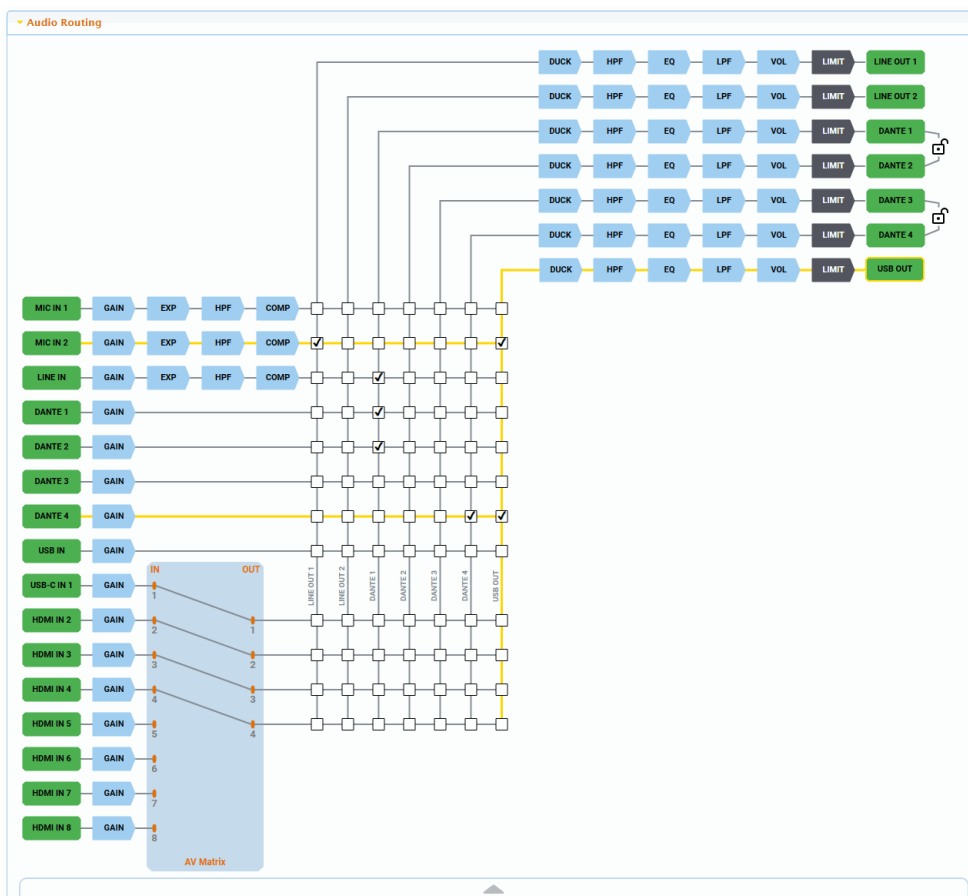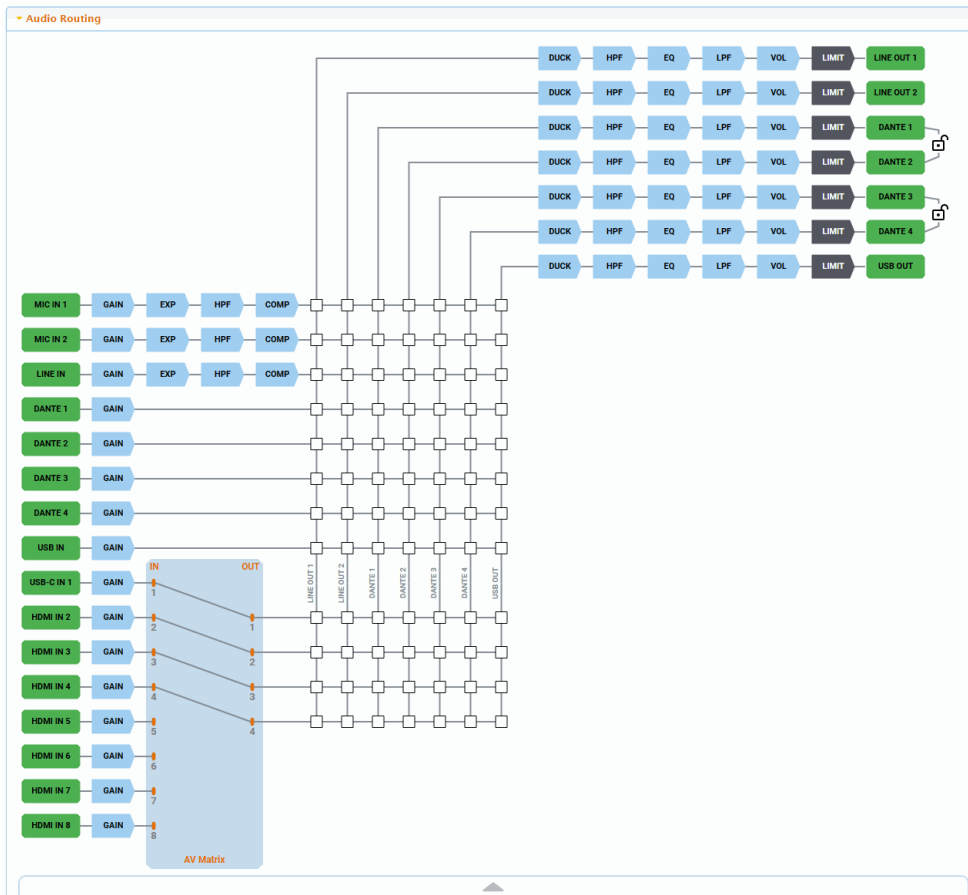

The light blue zone shows the input and output distribution according video routing. When select audio source here, it indicates that select the de-embedded audio from the source the corresponding output routed.

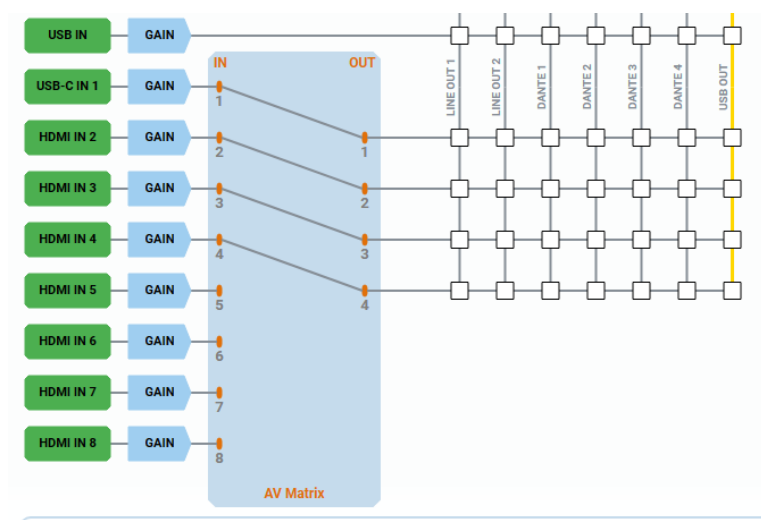

DSP configurations for inputs:

MIC IN 1 GAIN

Volume Meter

-100

-80

-60

-40

-20

0

-100 dB

Gain Control

0

+20

+40

+60

+80

0 dB

Volume Mute

Unmuted

Phantom 48V

Off

- GAIN (For MIC IN 1~2):
 - Volume Meter: Display the active audio level of the corresponding audio input in real-time.
 - Gain Control: Use the slider to adjust the audio gain. Default value: 0dB; Range: 0~+80dB.
 - Volume Mute: Click to set the corresponding audio to mute/unmute. Default setting: Unmuted.
 - Phantom 48V (for MIC IN 1 and MIC IN 2): Set the phantom 48V to on/off. When set it to enable, please ensure a phantom microphone is connected to the corresponding mic in port to avoid a damage to the microphone. Both the default setting of MIC IN 1 and MIC IN 2 Phantom Power Control are "Off"
- GAIN (For LINE IN, DANTE 1~4, de-embedded audio from USB-C IN, HDMI IN 2~8):
 - Volume Meter: Display the active audio level of the corresponding audio input in real-time.

LINE IN GAIN

Volume Meter

-100

-80

-60

-40

-20

0

-100 dB

Gain Control

-20

0

+10

+20

+30

0 dB

Volume Mute

Unmuted

- Gain Control: Use the slider to adjust the audio gain. Default value: 0dB; Range: -20dB~+30dB.
- Volume Mute: Click to set the corresponding audio to mute/unmute. Default setting: Unmuted.
- EXP (for MIC IN 1~2 and LINE IN): To increase the difference in loudness between the quieter and louder sounds. When the Expand module is used, the quiet sounds (usually background noises) become quieter while the loud sounds become louder. The levels of audio signals that fall below the set

MIC IN 1 EXP

Off

Threshold(dB)

-100

0

8

Expander Settings

Attack Time(ms)

1

(range 1-500ms, default 1ms)

Release Time(ms)

1000

(range 1-2000ms, default 1000ms)


Ratio

1:1

(range 1-100, default 1)


threshold level are reduced.

On/Off: Click to set EXP of the corresponding audio input to on/off. Default setting: Off.

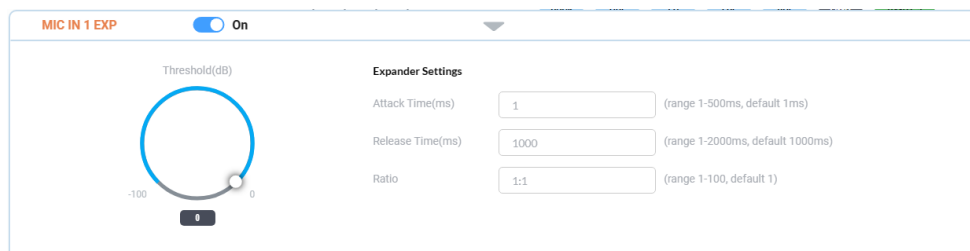


When set the EXP to On:

- Threshold (dB): Adjust the knob slider or input the value to set the threshold. Decreases the volume of audio signals that are below the threshold level. Default setting: 0dB.
- Expander Settings:
 - Attack Time (ms): Input the attack time. Set the response speed of the expander to signal levels above the threshold. Default setting: 1ms Range: 1~500ms
 - Release Time (ms): Input the release time. Set the response speed of the expander to signal levels below the threshold. Default setting: 1000ms; Range: 1~2000ms
 - Ratio: Input the ratio to set the amount to which the volume is decreased. The higher the ratio the more the audio level below the threshold is lowered. Default setting: 1; Range: 1~100.

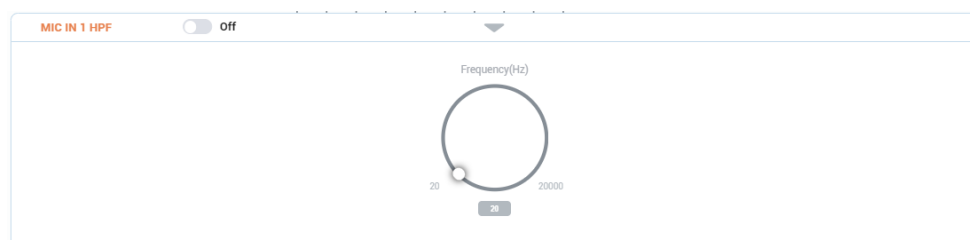


- HPF (for MIC IN 1~2 and LINE IN): Use the HPF module to cut off low frequencies and let higher frequencies pass.

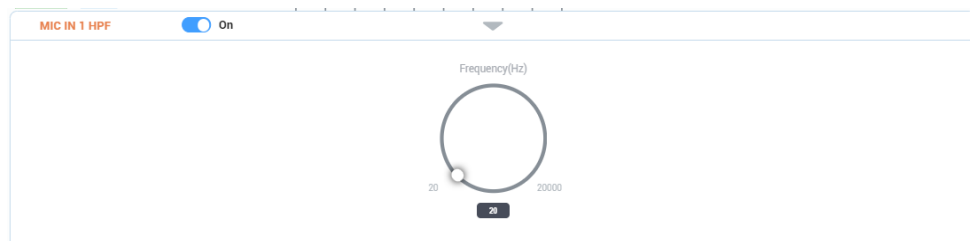

On/Off: Click to set HPF of the corresponding audio input to on/off. Default setting: Off.

When the HPF is set to on:

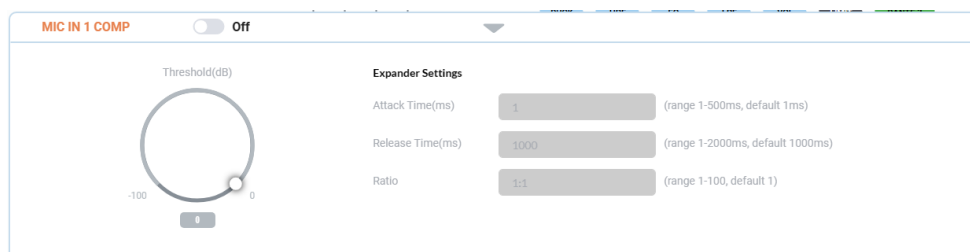

Frequency (Hz): Adjust the knob slider or input the value to set the cut-off frequency. Frequencies under the cut-off frequency are attenuated. Default setting: 20Hz.

- COMP (for MIC IN 1~2 and LINE IN): To reduce the signal dynamic range which is the difference between the loudest and quieter sounds.

On/Off: Click to set COMP of the corresponding audio input to on/off. Default setting: Off.

When set the COMP to on:

- **Threshold (dB):** Adjust the knob slider or input the value to set the threshold. The threshold is the level that the signal needs to rise above for the compressor to begin working. If a signal is too low or does not cross the threshold, the compressor allows the signal to pass through unchanged
- **Expander Settings:**
 - **Attack Time (ms):** Input the attack time. The attack time is the response speed of the compression to signal levels above the threshold. Default setting: 1ms; Range: 1~500ms.
 - **Release Time (ms):** Input the release time. The release time is the response speed of the compressor to signal levels above the threshold. Default setting: 1000ms; Range: 1~2000ms.
 - **Ratio:** Input the ratio value to set the amount to which the volume is decreased. Default setting: 1; Range: 0~100.

Output DSP configurations:


- **DUCK:** When multiple audio outputs are present, the selected primary audio needs to play, and the ducking function will automatically reduce the volume of other audio signals.

On/Off: Set Ducking to on/off. Default setting: off.

When set DUCK to on:


- **Threshold (dB):** Use the knob slider, or enter the value to specify the volume threshold for ducking to occur. The lower the value is set, the easier the ducking is triggered. Default setting is -35dB.
- **Expander Settings:**
 - **Ducker Master:** Click to select the master input source from the drop-down menu for triggering ducking. When the selected input source reaches the ducking trigger, other inputs are ducked.
 - **Attack Time (ms):** Input the time to set the time it takes to lower the volume to the Ducking Depth after the Ducking Trigger threshold is met. Default setting: 1ms; Range: 1~500ms.
 - **Release Time (ms):** Input the time to set the time it takes to return to the regular volume from Ducking Depth. When the release time times out, the ducking audio's volume comes back up to its normal volume. Default setting: 1000ms; Range: 1~2000ms.
 - **Ratio:** Input the ratio value to set the volume reduction ratio. The lower the value is set, the lower the volume of the specified audio input is when ducking is triggered. Default setting is 10.

- HPF: Use the HPF module to cut off low frequencies and let higher frequencies pass.

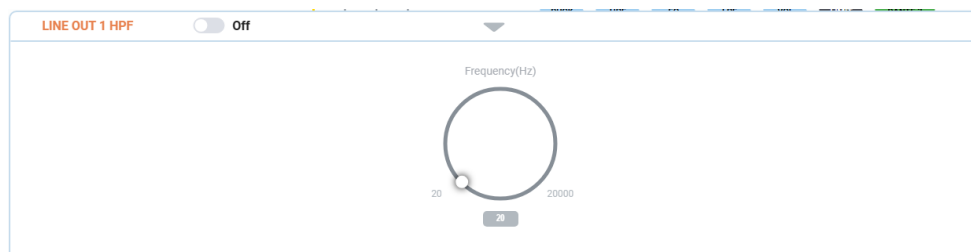

On/Off: Set HPF function to on/off. Default setting: off.

When it is set to on:

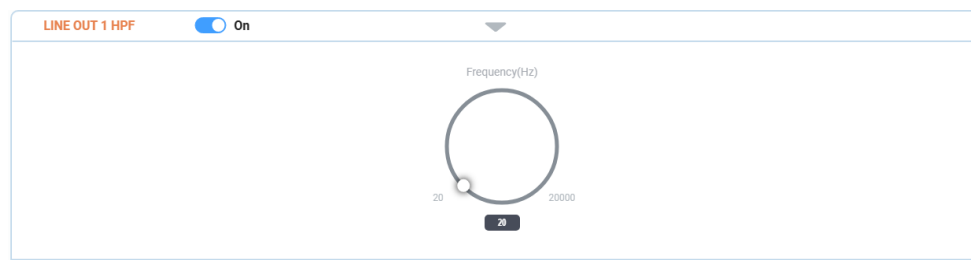

Frequency (Hz): Use the knob slider or input the value to set the cut-off frequency. Frequencies under the cut-off frequency are attenuated. Default setting: 20Hz.

- EQ: To change the balance of different frequency components in the audio signal.




On/Off: Set EQ function to on/off. Default setting: off.

When set it to on:




- Frequency: Use the slider bars above the frequencies to adjust the audio amplitude in different frequencies. Default setting: 0dB; Range: -10dB ~ 10dB.
- Q-factor: Input the Q-factor value in each frequency. When boosting or cutting a particular frequency, the Q- factor represents the width of the frequency range that is affected. Default setting: 1.4; Range: 0~16.
- LPF: To cut off high frequencies and let lower frequencies pass.

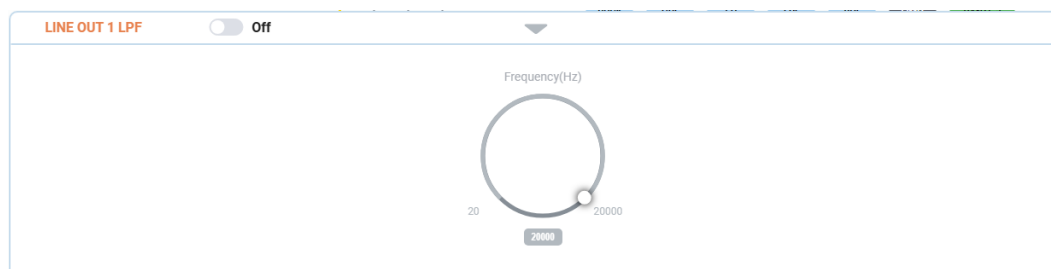


On/Off: Set the LPF function to on/off. Default Setting: Off.

When set it to on:

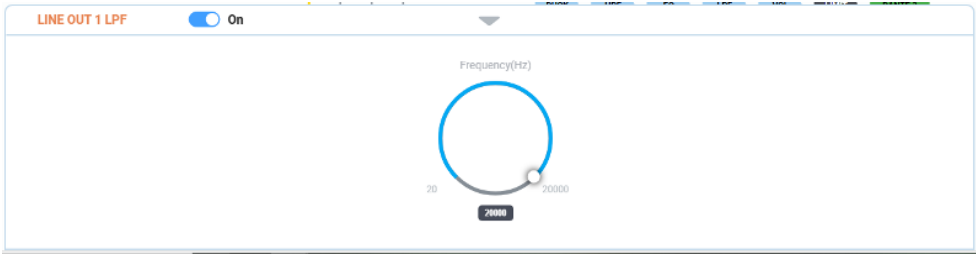

Frequency (Hz): Use the knob slider or input the value to adjust the frequency. Default setting: 20000Hz.


• VOL:

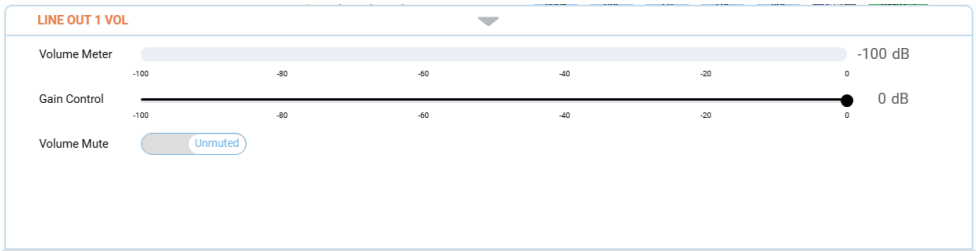

- Volume Meter: Display the corresponding output audio intensity of the corresponding audio input in real-time.
- Gain Control: Use the slider to set the gain of the corresponding audio output. Default setting: 0dB.
- Volume Mute: Click to set the corresponding audio output to mute/unmute. Default setting: Unmuted.


• (unlink) / (link): Click to set the corresponding two outputs to link or unlink. Default setting: Unlink.
For DANTE OUT 1 and DANTE OUT 2/DANTE OUT 3 and DANTE OUT 4: When set them to link, select the same input source(s) simultaneously, and the DSP configurations are synchronous.

USB Routing



This section allows users to select USB host all the USB devices (including the local USB devices and remote USB devices (connected with HDBT receivers or NHD 500 receivers) connected.

Active USB Host Selection: Select the USB Host from the drop-menu. The default setting is USB-B Port1.

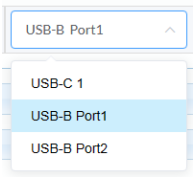

For example, when select USB-B Port1, all USB devices the matrix connected and the remote receivers connected are connected to USB-B Port 1.

Display Control

Display Control

CEC Control

Zone	Manual	Auto	Delay(1-30min)	Command Setting
OUTPUT 1	Display On Display Off	<input checked="" type="checkbox"/>	2	
OUTPUT 2	Display On Display Off	<input checked="" type="checkbox"/>	2	
OUTPUT 3	Display On Display Off	<input checked="" type="checkbox"/>	2	
OUTPUT 4	Display On Display Off	<input checked="" type="checkbox"/>	2	

- Display On: Click to send the saved Display On command to the connected CEC-enabled display to power on it immediately.
- Display Off: Click to send the saved Display Off command to the connected CEC-enabled display to power off it immediately.
- Auto On/Off: Click to enable or disable the CEC Auto Control. By default, the auto CEC control is ON.
- Delay Time (1~30min): click the up/down arrow to set the time for the display to power off automatically when no signal is present. For example, if Auto control is set as on and the time is set to 2 minutes, the output display will power off automatically when there's no signal at the display for 2 minutes.
- Command Setting: Click "⚙" to enter the following window to do command testing, set and save commands of Display On/Off.

Command Testing
Test

Display On
40 04
Save

Display Off
40 36
Save

- Command Testing: Input a Display on/off command, and then click "Send" to send it to the selected output to test if it takes effects.
- Display On/Off: Input the corresponding CEC command, then click "Save" to save it.

Note: If users want to change CEC commands, please refer to the CEC specification document.

Presets Matrix Control

Presets Matrix Control

Preset 1 Save Load	Preset 2 Save Load	Preset 3 Save Load
Preset 4 Save Load	Preset 5 Save Load	Preset 6 Save Load

This section saves/loads the matrix control settings to or from the Matrix.

- Save: Save the selection settings to the matrix.
- Load: Load the saved preset file from the matrix.

General Setting

Matrix Control
General Setting
Advanced Setting

User Mode
Admin Login

A/V Configuration

GPIO Settings

Relay Settings

A/V Configuration

A/V Configuration

Source

1 INPUT 1

2 INPUT 2

3 INPUT 3

4 INPUT 4

5 INPUT 5

6 INPUT 6

7 INPUT 7

8 INPUT 8

Zone

1 OUTPUT 1

2 OUTPUT 2

3 OUTPUT 3

4 OUTPUT 4

Input 1 Name

INPUT 1

EDID

Fixed 4K30 2.0CH PCM Audio with SDR

Apply

Save EDID

Video In

Video Details

Resolution	0x0	Frame Rate	0
HDR Info	None	Color Space	None
Deep Color	None	HDCP Version	None

Audio In

Audio Details

Format	None	Sampling Rate	0kHz
--------	------	---------------	------

A/V Configuration

Source

1 INPUT 1

2 INPUT 2

3 INPUT 3

4 INPUT 4

5 INPUT 5

6 INPUT 6

7 INPUT 7

8 INPUT 8

Zone

1 OUTPUT 1

2 OUTPUT 2

3 OUTPUT 3

4 OUTPUT 4

Output 1 Name

OUTPUT 1

Save EDID

HDCP ⓘ

Auto

Output Resolution

Auto

Video Out

Video Details

Resolution	0x0	Frame Rate	0
HDR Info	None	Color Space	None
Deep Color	None	HDCP Version	None

Audio Out

Audio Details

Format	None	Sampling Rate	0kHz
--------	------	---------------	------

This section allows users to set name, EDID, HDCP and get video and audio information of each input source, and set name, save EDID, select HDCP, output resolution, and get output video and audio information.

- Source/Zone: Select an input/output to set (the button will have an orange frame when the selection is done).

Green button: Indicates the corresponding input/output port is connected to active source/display.

White button: Indicates the corresponding input/output port isn't connected with active source/display.

- Input (1~8) / Output (1~4) Name: Input a new name for the selected input/output.
- EDID (for input 1-8): Select EDID for the corresponding input port, and click "Apply" to take effect. The default EDID of input 2-8 is Fixed 4K60 2.0CH PCM Audio with SDR, and the default EDID of the input 1 is Fixed 4K30 2.0CH PCM Audio with SDR.

EDID Selection includes:

Copy form HDMI Output 1;

Copy form HDMI Output 2;

Copy form HDMI Output 3;


Copy form HDMI Output 4;

Fixed 4K60 2.0CH PCM Audio with HDR;


Fixed 4K60 2.0CH PCM Audio with SDR;

Fixed 4K30 2.0CH PCM Audio with HDR;
 Fixed 4K30 2.0CH PCM Audio with SDR;
 Fixed 1080p@60Hz 2.0CH PCM Audio with HDR;
 Fixed 1080p@60Hz 2.0CH PCM Audio with SDR;
 EDID Write.

When select EDID write, users can click "UPLOAD FILE" in the popped window to select an EDID file from the local PC to write to the corresponding port.

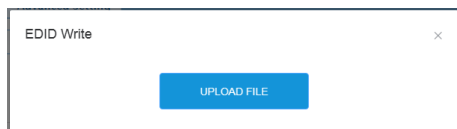

- Save EDID: Click to save the EDID information of the select input/output as a bin file to local PC.
- HDCP (ON/OFF) (for input 2~8): Click to enable/disable HDCP encryption of each input port, the default setting is "ON".
- HDCP (for output 1~4): Select HDCP support for the selected output port from the drop-down menu (Auto, HDCP v1.X). By default, Output HDCP Support is "Auto", follow the input HDCP. For example, input HDCP is HDCP 2.2, output HDCP is also HDCP 2.2. When set it to HDCP v1.X, it means the HDCP of the output is set to HDCP 1.4.

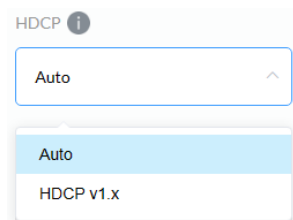

- Output Resolution (for output 1~4): Select output resolution for the selected output port. The default setting is "AUTO".
- Video In/Audio In (for input 1~8): Shows the video and audio information of the selected input.
- Video Out/Audio Out (for input 1~4): Shows the video and audio information of the selected input.

GPIO Settings

▼ GPIO Settings	
GPIO Channel	1
GPIO Type	
GPIO State	

[Apply](#)

This section allows users to set GPIO pins.

- GPIO Channel: Select the port number from the drop-down menu to configure.
- GPIO Type: Select the GPIO trigger type from the drop-down menu between Digital In and Digital Out.

When select Digital In (default):

▼ GPIO Settings	
GPIO Channel	1
GPIO Type	Digital In
Low-state Threshold(V)	1
High-state Threshold(V)	2
GPIO State	LOW

[Apply](#)

This section allows users to set low and high state threshold. This mode reads the digital input of an external sensor device that is connected to the GPIO port, and detects the voltage state.

- Low-state Threshold (V): Define the low detect voltage threshold (the range is 1 to 22V).
- High state Threshold (V): Define the high detect voltage threshold (the range is 2 to 23V).

- GPIO State: If the detected result is less than the low-state threshold users set, it will display "LOW" here, and if the result is more than the high-state threshold users set, it will display "HIGH" here.
- Apply: Click "Apply" to confirm the settings.

When select Digital Out

GPIO Settings

GPIO Channel	1
GPIO Type	Digital Out
Pull-up Resistor	Disconnected
GPIO State	Low

Apply

- Pull-up Resistor: Set Pull-up Resistor to "Connected" / "Disconnected".
- GPIO State: Set GPIO state to "High" or "Low".

When set the GPIO State to "High", and set Pull-up Resistor to "Connected", the matrix supplies an internal 5V Pull-up resistor. While set Pull-up Resistor to "Disconnected", the pull-up voltage is determined by the external connected pull-up resistor. When GPIO state is set to "Low", the output voltage is low level.

- Apply: Click to confirm the settings.

Relay Settings

REALY Settings

Relay Channel	1
Relay State	Off

This section allows users to configure relay ports.

- Relay Channel: Select relay channel between 1 and 2.
- Relay State: Set relay state from the drop-down menu. When it is set to "On", NO and COM pins of the selected relay port are connected, and NC and COM pins of the selected relay are disconnected. When it is set to "Off", NC and COM pins of the selected relay port are connected, and NO and COM pins of the selected relay port are disconnected.

Advanced Setting

Matrix ControlGeneral SettingAdvanced Setting

User ModeAdmin Login

Information

Fan and Temperature

Auto Switch

Network

Security

Change Admin Login Password

FW Update

System

Telnet API Command

Log

Information

Information

MODEL	MAC ADDRESS	IP ADDRESS
MX-0804-EDC	e4:ce:02:13:36:28	169.254.54.40
FIRMWARE VERSION		
1.2.2		

This section shows the device's information, including Model, Mac address, IP address and firmware version.

Fan and Temperature

▼ Fan and Temperature	
Fan Speeds [2220,2280]	Temperatures(°C) [49]

This section shows the device's fan speed and temperature.

Auto Switch

▼ Auto Switch				
Auto Switch:	<input checked="" type="checkbox"/> Disabled			
Output Group Select:	<input type="checkbox"/> OUTPUT 1	<input type="checkbox"/> OUTPUT 2	<input type="checkbox"/> OUTPUT 3	<input type="checkbox"/> OUTPUT 4
Note: when matrix detects there's a new source, it will auto switch the new input to above selected outputs.				
				Apply

This section allows users to set output group, and set auto switch function to enable/disable of the selected output group.

- Auto Switch: Click to set the auto switch function of the selected output group to enable/disable. Default setting: Disabled.
- Output Group Select: Check the box before the corresponding output to set them as a group. Default setting: Unchecked (all outputs are not grouped).
- Apply: Click to perform the grouping.

For example:

Check the OUTPUT 1 and OUTPUT 2 as a group, and set the Auto Switch function to Enabled, when a new source is inserted, OUTPUT 1 and OUTPUT 2 will automatically switch to the source.

Note: Other outputs not grouped are not affected by this function, and switched in original way.

Network

▼ Network	
Mode <input checked="" type="radio"/> DHCP <input type="radio"/> Static	
Device IP Address <input type="text" value="192.168.1.25"/>	
Subnet Mask <input type="text" value="255.255.240.0"/>	
Device Gateway <input type="text" value="192.168.2.1"/>	
Note: LAN Module will automatically reboot after changing Network setting.	
Apply	

Network is used to set between the static and dynamic IP address.

- DHCP: When enabled, the IP address of the Matrix is assigned automatically by the DHCP server connected.
- Static: When enabled, set up the IP address manually.
- Apply: Click to enable the network setting.

Note:

- When "Static" is selected, please ensure your PC is in the same network segment as the Matrix, i.e., the IP address of your PC should be set as 192.168.xxx.xxx.
- Please wait for 2-3 minutes for the Matrix's LAN module to reboot and reconnect after the network setting is changed.

Security

▼ Security

Telnet over TLS	Disable ▼
HTTPS	Enable ▼

- Telnet over TLS (Disable/Enable): Set TLS (Transport Layer Security) to enable or disable, when it is set to enable, users can change the TelnetS login password. The default setting is "Disable".

Note: The password must be 4 to 16 characters in length, and alphanumeric only.

▼ Security

Telnet over TLS	Enable ▼
Old Password	<input type="password"/>
New Password	<input type="password"/>
Confirm New Password	<input type="password"/>

Note: Password must be 4 to 16 characters in length(alphanumeric only).

Apply

HTTPS	Disable ▼
-------	-----------

- HTTPS (Enable/Disable): Set HTTPS to "Enable" or "Disable". The default setting is "Enable". HTTPS (Enable): Https is mandatory supported. HTTPS is a secure version of the HTTP protocol that builds an SSL encryption layer over HTTP and encrypts the transmitted data.

HTTP network protocol is the most widely used hypertext transfer protocol, this method allows a third-party to listen in and eavesdrop on the transferred information. To ensure the secure data transmission, the HTTP can be disabled, and the all the information can be transferred via HTTPS. HTTPS protocol encrypts the clear text, so it becomes incomprehensible for a third-party and keeps the data secure.

Change Admin Login Password

▼ Change Admin Login Password

Old Password	<input type="password"/>
New Password	<input type="password"/>
Confirm New Password	<input type="password"/>

Note: Password must be 4 to 16 characters in length(alphanumeric only).

Apply

This section allows users to change admin password. The default password is "admin".

- Apply: Click to perform the change.

Note: Password must be 4 to 16 characters in length (alphanumeric only).

FW Update

▼ FW Update

File:

Browse

Update

Note: Do not power off the matrix when updating.

This section allows users to update firmware.

To update Firmware:

1. Click "Browse" for the update file.

FW Update

File: FW_Update-MX0804-1023-A00-Whole-V1.2.2.0.zip

Browse

Update

Note: Do not power off the matrix when updating.

2. Click "Update" to proceed.

Update Progress

Firmware uploading 5%

5%

Note: DO NOT INTERRUPT or POWER OFF the unit while updating, doing so will cause irreparable harm to the product.

Update Progress

Upgrading ARM 3%

3%

Note: DO NOT INTERRUPT or POWER OFF the unit while updating, doing so will cause irreparable harm to the product.

3. The matrix will reboot automatically after upgrading is completed.

Update Progress

Upgrading Success Rebooting

100%

Note: DO NOT INTERRUPT or POWER OFF the unit while updating, doing so will cause irreparable harm to the product.

Note: Do not power off the matrix during the upgrading.

System

System

Reboot

Factory Reset

- Reboot: Click to reboot the device, and wait 2 minutes to re-access Web UI by refreshing the browser.
- Factory Reset: Click to reset the device to factory defaults, and wait 2 minutes to re-access Web UI by refreshing the browser.

Telnet API

Telnet API Command

Apply

This section allows users to input and send API commands to the matrix. The return value will be display in "Log" part.

Apply: Click "Apply" to send the input command to the matrix.

For example:

Telnet API Command

Log

Export Log

Note: Please wait a few moments for log retrieval.

17:11:48 Receive : HTTPS ON
17:11:48 Send : GET HTTPS
17:11:48 Receive : FAN_SPEED 0 0
17:11:48 Receive : TEMP 55
17:11:39 Receive : HTTPS ON
17:11:39 Receive : SYS_LOG log_20231024-1711.zip
17:11:38 Receive : FAN_SPEED 0 0
17:11:38 Receive : TEMP 54

Log

Log

Export Log

Note: Please wait a few moments for log retrieval.

17:10:48 Receive : FAN_SPEED 0 0
17:10:48 Receive : TEMP 54
17:10:38 Receive : FAN_SPEED 0 0
17:10:38 Receive : TEMP 54
17:10:28 Receive : FAN_SPEED 0 0
17:10:28 Receive : TEMP 54
17:10:18 Receive : FAN_SPEED 0 0
17:10:18 Receive : TEMP 55

This section shows the operation log and commands return.

Export Log: Click to export the log file to local PC.

